


Activation instruction for firmware H-RADIO

After installing the firmware, enter the activation key received by email on the receiver.



Use the on-screen keyboard. To delete an incorrectly entered character, press ←| After entering the key, press **OK**.

If the key is entered with an error, the system will prompt you to check your key on the website. Click **OK** and correct the error.

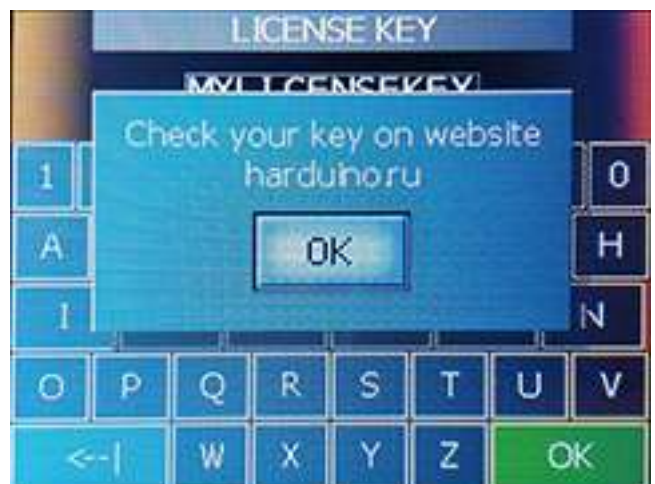

After successfully entering the key, the firmware can be activated in two ways. Online, by connecting the receiver to the Internet or manually by receiving the unlock code on the website.

Click **ONLINE** to activate the firmware in automatic mode.

Select your Wi-Fi access point from the list to connect to the Internet. Navigate through the list using the encoder.



Enter the password for your Wi-Fi hotspot. To select a keyboard character set, press **^** and **123**. To cancel and select another access point, press **ESC**. After entering the password, click **OK**.

After connecting the receiver to Wi-Fi, the name of the access point will turn green. Now click **EXIT** to continue.





The system will try to activate the firmware automatically.

Do not activate the firmware online if your receiver does not have a Wi-Fi antenna and the signal is very weak. This may lead to activation errors and technical support assistance will be required.



If it is impossible to establish a connection with the activation server, the system will display a message about the absence of a connection. Click **OK** to activate manually.

Open the website <http://harduino.ru> and follow the link to the activation page.

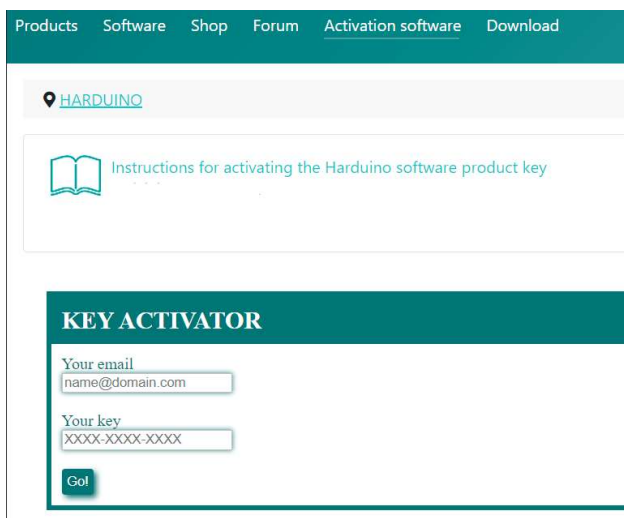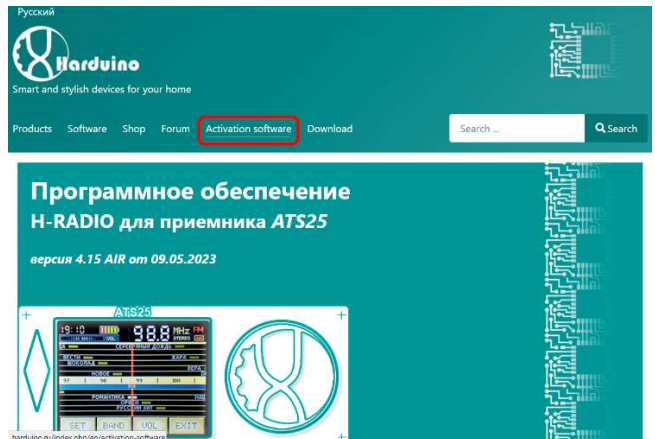

Enter your email address and activation key.


If the key is entered incorrectly, the system will report the absence of such a key. Fix the key and click **Go!**

The screenshot shows a web form titled "KEY ACTIVATOR". It has two input fields: "Your email" with the value "my.email@epost.com" and "Your key" with the value "MYLICENSEKEY". Below these fields is a green "Go!" button. At the bottom of the form, a red error message reads "Key not found".

The screenshot shows the "KEY ACTIVATOR" form. The "Your email" field contains "my.email@epost.com" and the "Your key" field contains "MYLICENSEKEY". Below these fields, a message states: "A confirmation code has been sent to your mailbox. Enter the code to continue". There is an input field with "XXXX" and a green "Go!" button. At the bottom, there is a button labeled "Send the code again through 37 seconds".

If you use an email address other than the one to which the activation key was sent to you, the system may request confirmation of the email address. Make sure that the address is entered correctly.

An email with a confirmation code will be sent to your email address. Enter it on the website and click **Go!**

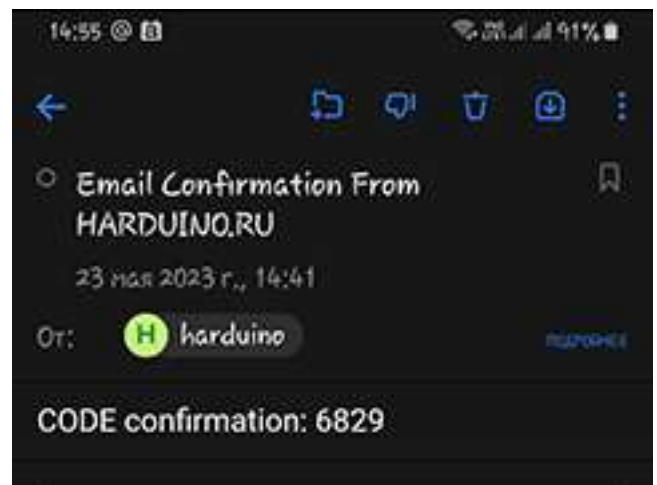

The screenshot shows the "KEY ACTIVATOR" form. The "Your email" field contains "my.email@epost.com" and the "Your key" field contains "MYLICENSEKEY". Below these fields, a message states: "A confirmation code has been sent to your mailbox. Enter the code to continue". There is an input field with "XXXX" and a green "Go!" button. At the bottom, there is a button labeled "Send the code again".

If there is no message with the code, check the SPAM folder of your mailbox. After a minute, you can resend the confirmation code by clicking **Send the code again** button.

After successfully logging into your personal account, enter the 24-digit request code and click **Continue**.



If the request code is entered incorrectly, the system will report an error. Correct the request code and click **Continue** again.

KEY ACTIVATOR

nul@bk.ru receive information messages

CURRENT KEY:

ENTER REQUEST CODE:

XXXX-XXXX-XXXX XXXX-XXXX-XXXX

Continue

Use the 24-digit request code issued by the receiver to get the unlock code on the site.

KEY ACTIVATOR

nul@bk.ru receive information messages

CURRENT KEY:

ENTER REQUEST CODE:

MYRE-QUES-TCOD MYRE-QUES-TCOD

Continue

Error activation: error entering the request code

KEY ACTIVATOR

nul@bk.ru receive information messages

CURRENT KEY:

[Untie the key from the email](#)

UNLOCK CODE:

PXLE-P940-UDMS

YOUR KEYS BINDINGS:

H-RADIO ESP32 SI4735 V4.14
ID 083AF27BC4AC
Removing the binding is possible
code for delete binding: 79MI-SQG7-HSDR

Change

Upon successful activation, the system will issue a 12-digit unlock code.

Press **ENTER** on the receiver to enter the unlock code received on the website.



Enter the unlock code. In case of incorrect input, the system will display an input error message. You need to fix the unlock code.

After successful activation, you can use the receiver.

When updating the firmware, activation information is saved, no reactivation is required.

The activation key can only be linked to one device.



You can unlink the key from the receiver for activation on another device. This can be done on the receiver in **SETUP**, but not more than once a month. You will find information about the possibility of untying and the code for removing the binding in your personal account. Untying is possible online at the receiver or in your personal account, click the **Change** button for your device and enter the request code received at the receiver after entering the code to remove the binding.

